

Min-ETune™ >>> QUICK START GUIDE



MULTI-STRING TUNING:

- 1 PUSH "ON" TO TURN ON SYSTEM.
- 2 STRUM ALL OPEN STRINGS AND WATCH LEDS INDICATE THE TUNING OF THE STRINGS.
- 3 WAIT 5 TO 10 SECONDS. IF SOME LEDS ARE NOT GREEN, MUTE ALL OTHER STRINGS AND PICK THE STRINGS THAT ARE INDICATED IN RED.
- 4 REPEAT IF NECESSARY. SYSTEM WILL TURN OFF WHEN ALL STRINGS ARE IN TUNE.

CHANGE TUNING FROM STANDARD E TO E_b (EXAMPLE):

- 1 PUSH "ON" TO TURN ON SYSTEM.
- 2 PUSH "ON" AGAIN TO ENTER MAIN MENU.
- 3 PUSH "LEFT" UNTIL "B" IS SELECTED.
- 4 PUSH "ENTER" TO START TUNING PROCESS. MAKE SURE YOUR FINGERS ARE CLEAR OF THE STRINGS AND KEYS.
- 5 WHEN KEYS STOP TURNING, STRUM ALL OPEN STRINGS.
- 6 WAIT 5 TO 10 SECONDS. IF SOME LEDS ARE NOT GREEN, MUTE ALL STRINGS AND PICK THE STRINGS THAT ARE INDICATED IN RED.
- 7 REPEAT IF NECESSARY. SYSTEM WILL TURN OFF WHEN STRINGS ARE IN TUNE.

SINGLE-STRING TUNING:

- 1 PUSH AND HOLD "ON" TO TURN ON SYSTEM.
- 2 PICK EACH STRING WHEN LED IS INDICATED IN RED AND WAIT UNTIL LED TURNS GREEN.
- 3 MUTE STRINGS THAT ARE TUNED AND REPEAT UNTIL EACH STRING INDICATES GREEN.
- 4 SYSTEM WILL TURN OFF WHEN ALL STRINGS ARE TUNED.

TUNING OVERVIEW:

THE RED BANK

	E6 th	A5 th	D4 th	G3 rd	B2 nd	e1 st
E "STANDARD"	E2	A2	D3	G3	B3	E4
A "DADGAD"	D2	A2	D3	G3	A3	D4
D "LOW D"	D2	G2	C3	F3	A3	D4
G "DROP-D"	D2	A2	D3	G3	B3	E4
B "E _b "	E _b 2	A _b 2	D _b 3	G _b 3	B _b 3	E _b 4
e "DOUBLE DROP-D"	D2	A2	D3	G3	B3	D4

THE GREEN BANK







	E6 th	A5 th	D4 th	G3 rd	B2 nd	e1 st
E "OPEN E"	E2	B2	E3	G#3	B3	E4
A "OPEN A"	E2	A2	E3	A3	C#4	E4
D "OPEN D"	D2	A2	D3	F#3	A3	D4
G "OPEN G"	D2	G2	D3	G3	B3	D4
B "DOBRO"	G2	B2	D3	G3	B3	D4
e "ALL 4 TH "	E2	A2	D3	G3	C4	F4

i THE BLUE BANK IS USER-DEFINED

E6 th	A5 th	D4 th	G3 rd	B2 nd	e1 st
------------------	------------------	------------------	------------------	------------------	------------------




LED LEGEND

LED LEGEND FOR TUNING PROCESS (e-E)

-  : STRING IN TUNE
-  : STRING NOT IN TUNE (PICK STRING)
-  : FREQUENCY OUT OF PITCH WINDOW
-  : RESPECTIVE ROBOHEAD IS IN MOVEMENT
-  : FREQUENCY MEASUREMENT IN PROGRESS
-  : INTERFERENCE BETWEEN LOWER AND HIGHER STRINGS

i MUTE LOWER STRINGS THAT ARE IN TUNE AND STRUM HIGHER STRINGS AGAIN.

LED LEGEND (BATTERY)

-  : BATTERY IS FULLY CHARGED
-  : BATTERY IS LOW
-  : BATTERY IS EMPTY



DOWNLOAD MANUAL FOR DETAILED INSTRUCTIONS AND IMPORTANT SAFETY INFORMATION » <http://www.Gibson.com/Min-ETune>



PLEASE NOTE THE BASS SIDE ROBOHEADS TURN CLOCKWISE TO SHARPEN AND ANTICLOCKWISE TO FLATTEN.



DO NOT USE ANY STRING WINDING TOOLS AS THAT MAY CAUSE DAMAGE TO THE ROBOTIC TUNING PEGS.



CHARGE BATTERY WITH THE SUPPLIED CHARGER. BATTERY IS FULLY CHARGED WHEN LED ON THE CHARGER IS GREEN.

