



## MULTI STRING TUNING:

- 1 PUSH "ON" TO TURN ON TUNING.
- 2 STRUM ALL OPEN STRINGS AND WATCH LEDS. (E THROUGH e LED'S INDICATE THE STRING BEING TUNED)
- 3 WAIT 5 TO TEN SECONDS. IF SOME LEDS ARE NOT GREEN, MUTE ALL STRINGS AND PICK OR STRUM STRINGS THAT INDICATE RED.
- 4 REPEAT IF NECESSARY. SYSTEM WILL TURN OFF WHEN ALL STRINGS ARE IN TUNE.

## CHANGE TUNING FROM STANDARD E TO EB (EXAMPLE):

- 1 PUSH "ON" TO TURN ON SYSTEM.
- 2 PUSH "ON" AGAIN TO ENTER MAIN MENU.
- 3 PUSH "LEFT" TILL "B" IS SELECTED.
- 4 PUSH "ENTER" TO START TUNING PROCESS. MAKE SURE YOUR FINGERS ARE CLEAR OF THE STRINGS AND KEYS.
- 5 WHEN KEYS STOP TURNING, STRUM ALL OPEN STRINGS.
- 6 WAIT 5 TO TEN SECONDS. IF SOME LEDS ARE NOT GREEN, MUTE ALL STRINGS AND PICK OR STRUM STRINGS THAT INDICATE RED.
- 7 REPEAT IF NECESSARY. SYSTEM WILL TURN OFF WHEN STRINGS ARE IN TUNE.

## SINGLE STRING TUNING:

- 1 PUSH AND HOLD "ON" TO TURN ON SYSTEM.
- 2 PICK EACH STRING WHEN LED INDICATES RED AND WAIT TILL LED TURNS GREEN.
- 3 MUTE STRINGS THAT ARE TUNED AND REPEAT UNTIL EACH STRING INDICATES GREEN.
- 4 SYSTEM WILL TURN OFF WHEN ALL STRINGS ARE TUNED.



## TUNING OVERVIEW:

### THE RED BANK

	E6 <sup>th</sup>	A5 <sup>th</sup>	D4 <sup>th</sup>	G3 <sup>rd</sup>	B2 <sup>nd</sup>	e1 <sup>st</sup>
<b>E</b> "STANDARD"	E2	A2	D3	G3	B3	E4
<b>A</b> "DADGAD"	D2	A2	D3	G3	A3	D4
<b>D</b> "LOW D"	D2	G2	C3	F3	A3	D4
<b>G</b> "DROP-D"	D2	A2	D3	G3	B3	E4
<b>B</b> "E <sup>b</sup> "	E <sup>b</sup> 2	A <sup>b</sup> 2	D <sup>b</sup> 3	G <sup>b</sup> 3	B <sup>b</sup> 3	E <sup>b</sup> 4
<b>e</b> "DOUBLE DROP-D"	D2	A2	D3	G3	B3	D4

### THE GREEN BANK







	E6 <sup>th</sup>	A5 <sup>th</sup>	D4 <sup>th</sup>	G3 <sup>rd</sup>	B2 <sup>nd</sup>	e1 <sup>st</sup>
<b>E</b> "OPEN E"	E2	B2	E3	G#3	B3	E4
<b>A</b> "OPEN A"	E2	A2	E3	A3	C#4	E4
<b>D</b> "OPEN D"	D2	A2	D3	F#3	A3	D4
<b>G</b> "OPEN G"	D2	G2	D3	G3	B3	D4
<b>B</b> "DOBRO"	G2	B2	D3	G3	B3	D4
<b>e</b> "ALL 4TH"	E2	A2	D3	G3	C4	F4


### THE BLUE BANK IS USER-DEFINED

E6 <sup>th</sup>	A5 <sup>th</sup>	D4 <sup>th</sup>	G3 <sup>rd</sup>	B2 <sup>nd</sup>	e1 <sup>st</sup>
------------------	------------------	------------------	------------------	------------------	------------------




## LED EXPLANATION

#### LED EXPLANATION DURING THE TUNING (e-E)





-  : STRING IN TUNE
-  : STRING NOT IN TUNE (PICK STRING)
-  : FREQUENCY OUT OF PITCH WINDOW
-  : RESPECTIVE ROBOHEAD IS IN MOVEMENT
-  : FREQUENCY MEASUREMENT IN PROGRESS
-  : INTERFERENCE BETWEEN LOWER AND HIGHER STRINGS

 MUTE LOWER STRINGS THAT ARE IN TUNE AND STRUM HIGHER STRINGS AGAIN.

#### LED EXPLANATION (BAT)

-  : BATTERY IS FULL CHARGED
-  : BATTERY IS LOW
-  : BATTERY IS EMPTY

#### LED EXPLANATION (MENU)

-  : TUNING IS ACTIVE
-  : CONFIGURATION MENU
-  : FUNCTION MENU
-  : SYSTEM CONFIGURATION

#### BLINKING MENU LED

-  : ACOUSTIC GUITAR
-  : ELECTRIC GUITAR



DOWNLOAD FULL MANUAL FOR DETAILED INSTRUCTIONS AND IMPORTANT SAFETY WARNINGS » <http://www.Gibson.com/Min-ETune/>



PLEASE NOTE THE BASS SIDE ROBOHEADS TURN IN THE OPPOSITE DIRECTION FROM USUAL. THEY NOW TURN CLOCKWISE TO SHARPEN AND ANTI-CLOCKWISE TO FLATTEN.



DO NOT USE ANY STRING WINDING TOOLS AS THAT MAY CAUSE DAMAGE TO THE ROBOTIC TUNING PEGS.



CHARGE BATTERY WITH THE SUPPLIED CHARGER. BATTERY IS FULLY CHARGED WHEN LED ON THE CHARGER IS GREEN.