


Babicz Full Contact Hardware™ is designed with the performing musician in mind, and we at Gibson are confident that FCH will help add to your musical experience for years to come.



www.gibson.com

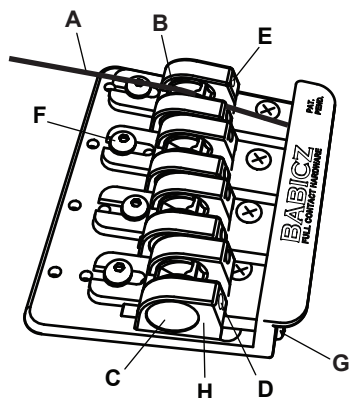

www.fullcontacthardware.com

Adjusting Your String Action Height:

- 1) Install string (A) by positioning it in the groove (B), found in each eCAM saddle (C).
- 2) Using the provided 2mm hex wrench: loosen screw (D), then set your string height by turning screw (E) until the desired string height is achieved.
- 3) Lock the eCAM saddle (C) by turning screw (D), using the 2mm hex wrench.

Adjusting Your Intonation:

- 1) Loosen the Saddle Housing Lock Screw (F) using the 2mm wrench.
- 2) Using a phillips screwdriver (not included), turn the Intonation Adjustment Screw (G), until the desired eCAM Saddle Housing (H) position is achieved.
- 3) Lock the eCAM Saddle Housing (H) in position by tightening the Saddle Housing Lock Screw (F) using the 2mm hex wrench.